
# MOXYO

#### Power Bank Uptown™ P2600 Manual

Thank you for purchasing our mobile Power Bank Uptown™ P2600, a high capacity rechargeable battery capable of providing power to smart phones and other mobile devices. Please read the following carefully before using the product.

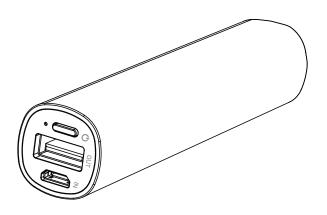

#### FCC Statement:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

# Product Features



Specifications

Battery Type: Lithium-ion Battery

Battery Life Cycle: ≥500 cycles

Input: 5V/1A

Output: 5V/1A


Capacity: 2600mAh@3.7V (9.62Wh)

Unit Dimensions: 98\*23\*23mm

Using Temperature: 0°C~45°C

Charging Time: Approx. 3.5 hours


- Package Contents
- (1) Power Bank
- (2) USB to Micro USB Charging Cable
- (3) Owner's Manual

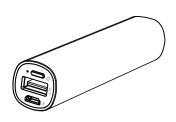


Power Bank( Pic.1 )



USB to Micro USB Charging Cable( Pic.2 )

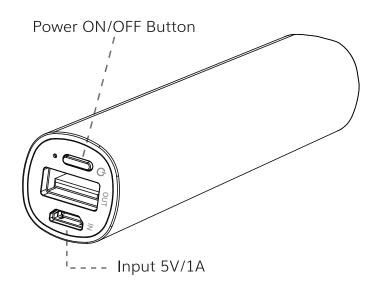

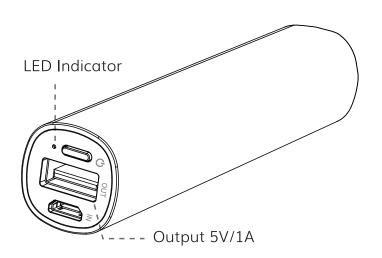


### How to Recharge



## Charging your Power Bank

- --If the red LED light is flashing quickly, the power bank is out of power and should be charged. Press the ON/OFF button to check the battery level.
- -Connect micro USB plug to power bank's input port.
- -Micro USB charging cable included.
- -Connect power bank to computer's USB port or AC adapter (sold separately).
- -The power bank will start charging within 5 seconds.
- -When the power bank is fully charged, the LED light is green.

Charge via Wall Adapter (adapter sold separately)

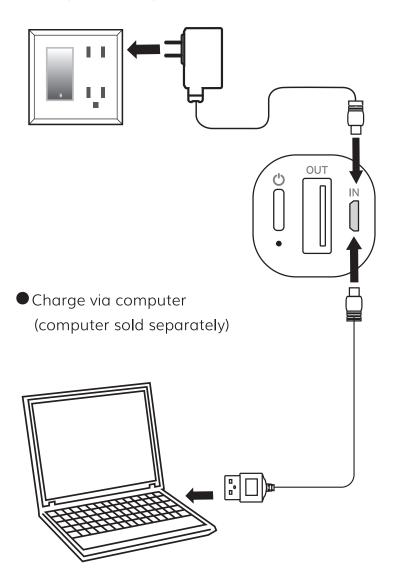


#### How to Use



- (2) Charging Your Devices Using the Power Bank
  - -Connect your device to the USB port of the power bank using your device's charging cable.
  - -Press the ON/OFF button.

The power bank will start charging the device.

-Disconnect the device from power bank after charging.

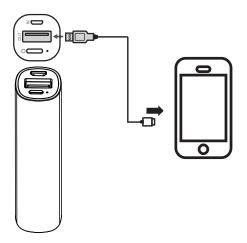

Suitable for USB-enabled products











# **Battery Check**



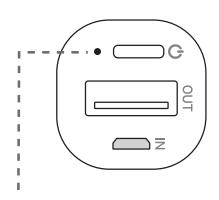

#### **LED Indicator**

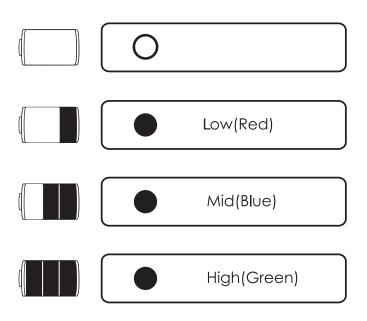

Remarks: LED light - on

LED light – off

## Safety And Maintenance



- Do not expose power bank to fire or high temperature.
- Do not dissemble or short circuit the power bank.





 Do not expose power bank to moisture or high humidity.



 Discontinue use if you find liquid leakage, overheating or other unusual conditions, or if power bank is damaged.



For more details visit: www.moxyo.com/owners-manual